 
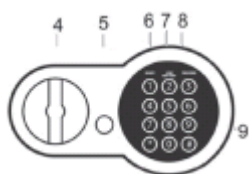 
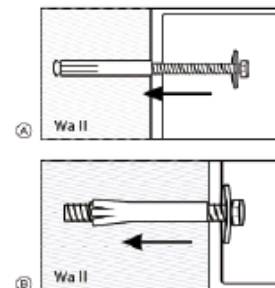 
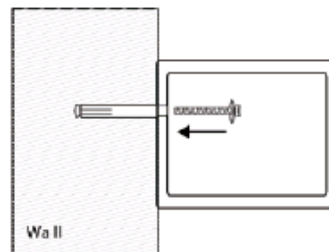 


Universal

Intelligent electronic safe

Mounting method

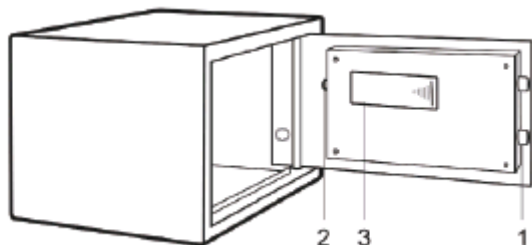

- 1. Bolts
- 2. Reset button
- 3. Battery compartment
- 4. Knob (masterkey)
- 5. Emergency lock cover
- 6. Green Light
- 7. Red Light
- 8. Yellow Light
- 9. Confirming button #

Opening your safe for the first time

Upon first opening, users should open the safe with the emergency key. The operation in details refers to "opening the safe with the emergency key".

- Remove emergency lock cover, then insert the emergency key, and turn it count clockwise.
- Turn the knob (master key) clockwise to open the door.

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

Inerting the batteries

Open the door.

Insert 4 X AA batteries into the battery compartment. Under normal conditions, if both of the red and the green lights are on at the same time, it means the voltage is low and you should insert new batteries.


Opening door

The user preset code "159#"

Input your user's code (3 to 8 digits), each pressing results one buzzer beep and yellow light flashes.

Press # or * button, the green light will be on.

Rotate the knob (master key) clockwise and pull outwards within 5 seconds, the door is opened.

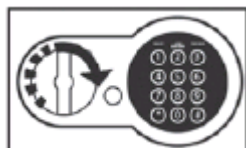

Automatic lock

3 continuously wrong entries will block the lock for 2 minutes.

Setting the user code

With the door open, press the reset button one, start setting code when the yellow light goes on.


Input new code (3-8 digits), and press # or * button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code. If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

Opening the safe with the emergency key

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown. You could also use the emergency key to open the safe.

Remove the cover of the emergency lock.

Insert the emergency key, turn it count clockwise, then turn the knob (master key) clockwise to open the door.

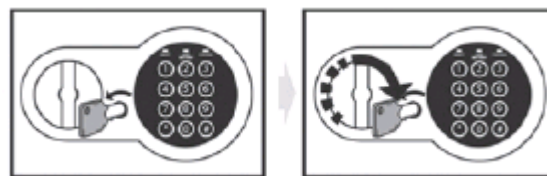

Closing door

Turn the knob (master key) counter clockwise to close the door.